



REFERENCE DRAWING	
FASTENERS	9951-005-W01

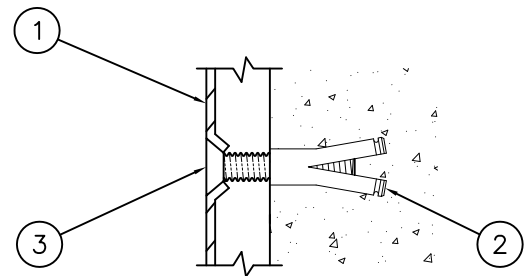

INSTALLATION INSTRUCTIONS:

- A- INSTALLATION REQUIRES A ROUGH WALL OPENING APPROXIMATELY 10-1/2" x 7-1/2" AND 4" DEEP
- B- USING TOWEL HOLDER ① AS A TEMPLATE LOCATE MOUNTING POINTS.

- C- DRILL HOLES FOR WALL ANCHORS BY OTHERS ②. INSTALL ANCHORS.
- D- SECURE TOWEL HOLDER ① TO WALL USING 1/4"-20 UNC VANDAL RESISTANT SCREWS ③ PROVIDED.

 WHITEHALL MANUFACTURING P.O. BOX 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746 (626) 968-6681 FAX (626) 855-4862	TITLE LIGATURE RESISTANT AUTO-RELEASE TOWEL HOLDER #1846FA		
	MANUFACTURE DATE JULY 2013 TO PRESENT	DATE ISSUED 07/12/13	DRAWING NUMBER 9918-114-001
		DATE REVISED 10/23/13 A	